

OLYMPUS
Quick Start Guide
FE-130/X-720/X-740
FE-140/X-725
Start Here

For more information, please refer to the Basic & Advanced Manuals or visit: www.olympusamerica.com/support

OLYMPUS IMAGING AMERICA INC.

BEFORE YOU BEGIN

Gather these items (box contents)



Digital Camera




Strap




AA Batteries (two)



Camera insert*



USB Cable (light gray)



Video Cable (black)




OLYMPUS Master software CD-ROM

Items not shown: Advanced Manual (CD-ROM), Basic Manual, warranty card. Contents may vary depending on purchase location.
* Use it when connecting the camera to an optional printer which is compatible to the ImageLink print system.

The images of the LCD screen and illustrations of the camera used in this manual may differ from the actual product. For this manual, all of the images are based on the FE-130/X-720/X-740 model.


1 GET STARTED

a. Attach the strap

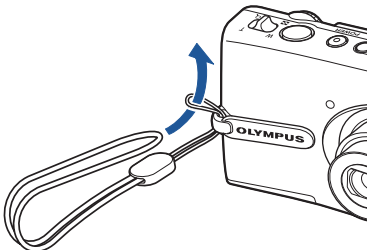


- Pull the strap tight so that it does not come loose.

b. Insert the batteries

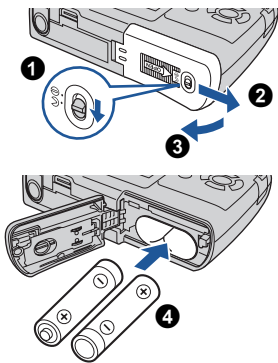


c. Set the date and time

- Set the mode dial to AUTO, and press the POWER button to turn the camera on.
- Press the MENU button to display the top menu and select [SETUP]>[] using the arrow pad (Δ/▽/◀/▶).
- Set "Date format", "Y", "M", "D", "hour" and "minute" by following the operation guide.

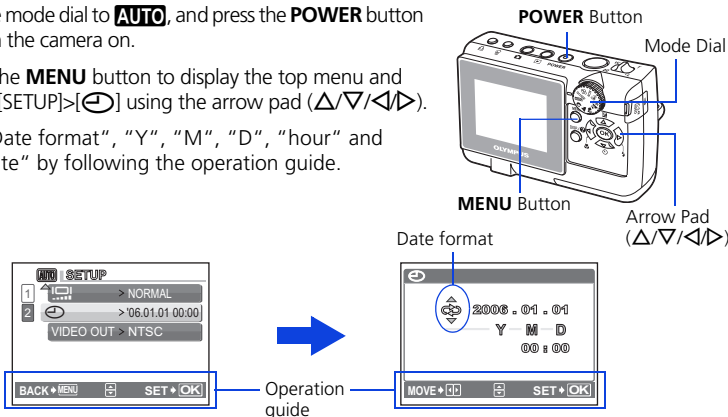

2 TAKE A PICTURE

a. Zoom

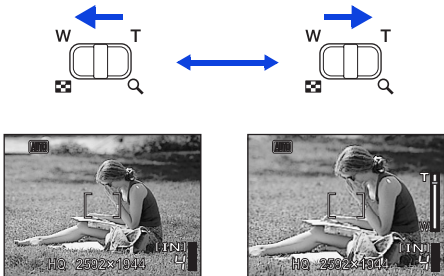


b. Focus

- Using the monitor, place the AF target mark over your subject.
- Press and hold the shutter button halfway to lock the focus.
- The green lamp indicates the focus is locked.

c. Take the picture

- Press the shutter button completely to take the picture.
- Pictures will be recorded in the internal memory of the camera.
- If the optional xD-Picture Card (hereinafter called "card") is inserted into the camera, pictures will be recorded in the card.


CAMERA DIAGRAM

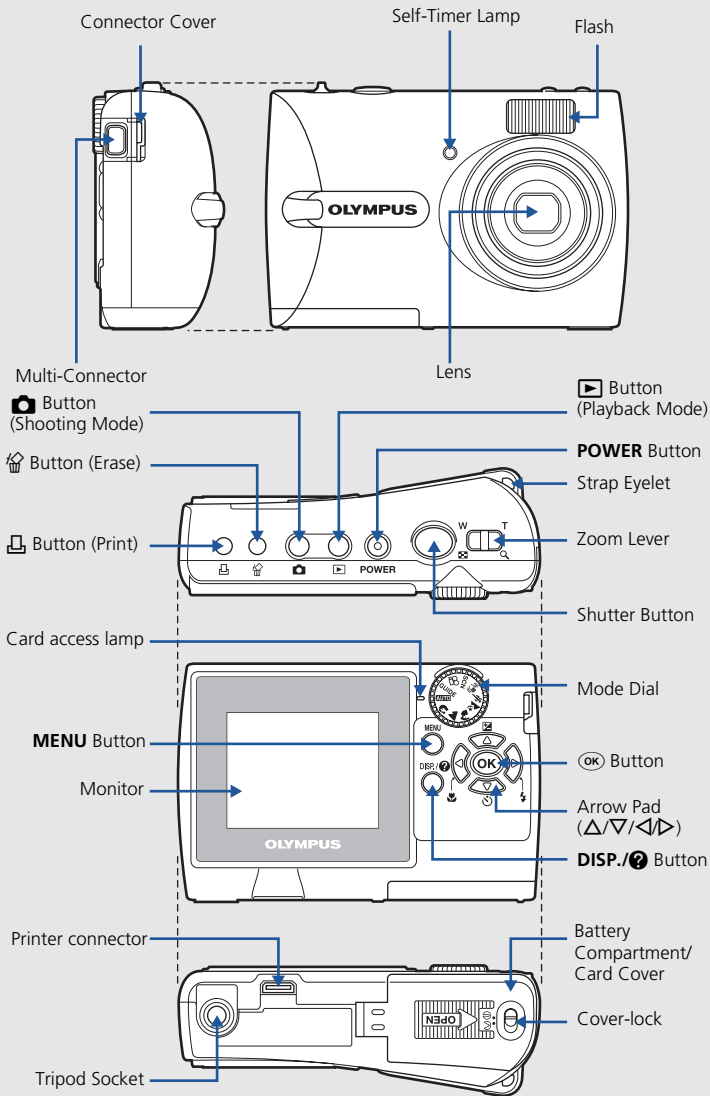

3 REVIEW OR ERASE A PICTURE

a. Press the [] button

- The last picture taken will be displayed.

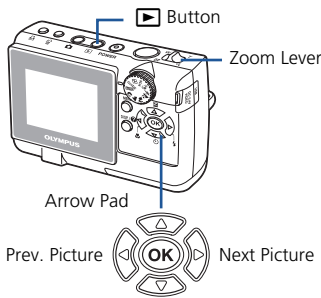

b. Take a closer look

- Pull the lever toward T to enlarge the picture up to 10 times the original size, or push the lever toward W to reduce the size.
- Press [OK] to return to the original size.
- Press Δ/▽/◀/▶ to scroll around.


c. To erase a picture

- Display the picture you want to erase.
- Press the [] button.
- Select [YES], and press [OK].
- The picture is permanently erased.

4 TRANSFER IMAGES


a. Install the software

- Insert the OLYMPUS Master CD-ROM.
- Windows: Click the "OLYMPUS Master" button.
- Macintosh: Double-click the "Installer" icon.
- Simply follow the on-screen instructions.
- Remember to register your camera when you install OLYMPUS Master or visit: www.olympusamerica.com/prodreg

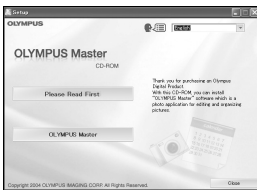


b. Connect the camera to the computer

- Connect the camera and computer using the USB cable (provided).
- The monitor will turn on automatically.

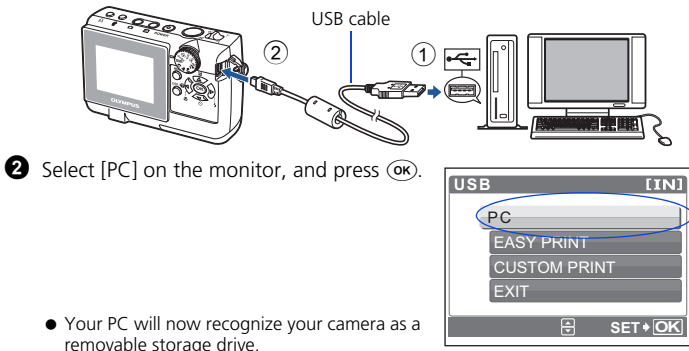


c. Transfer images to the computer

- With the camera now connected, open OLYMPUS Master.
- The [Transfer Images] window is displayed.
- Select the images you want to transfer, and click the [Transfer Images] button.

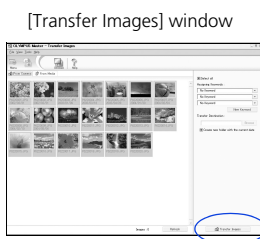

If the [Transfer Images] window is not displayed automatically:

- Click the "Transfer Images" icon on the OLYMPUS Master main menu.
- Click the "From Camera" icon.

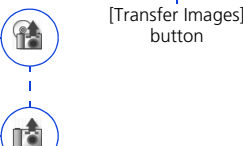

ANTES DE COMEÇAR

Reúna estes itens (conteúdo da caixa)



Câmera Digital




Correia



Pilhas AA (duas)



Acoplador da câmera*



Cabo USB (cinzento-claro)



Cabo de vídeo (preto)




CD-ROM do software OLYMPUS Master

Itens não ilustrados: Manual Avançado (CD-ROM), Manual Básico, Cartão de Garantia. O conteúdo pode variar consoante o local de aquisição.
*Use-o ao conectar a câmera a uma impressora opcional que seja compatível ao sistema de impressão ImageLink.

As imagens do ecrã LCD e as ilustrações da câmera utilizadas neste manual podem diferir do produto real. Neste manual, todas as imagens têm como base o modelo FE-130/X-720/X-740.


1 INICIAÇÃO

a. Colocar a correia

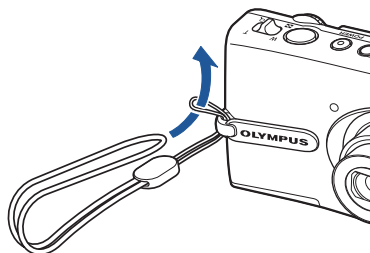




- Puxar bem a correia de modo a que não fique solta.

b. Inserir as pilhas

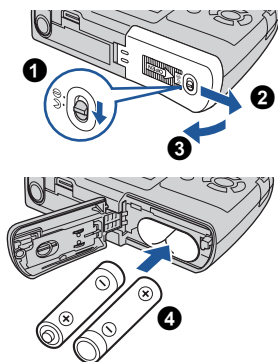

c. Definir a data e hora


- 1 Coloque o seletor de modo em **AUTO** e pressione o botão **POWER** da câmera na posição ligado.
- 2 Pressione o botão **MENU** para visualizar o menu principal e seleccione [CONFIG.]>[E] usando o selector em cruz (Δ/▽/◀/▶).
- 3 Configure "formato da data", "A", "M", "D", "hora" e "minuto" seguindo o guia de funcionamento.

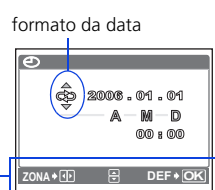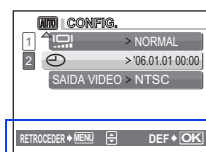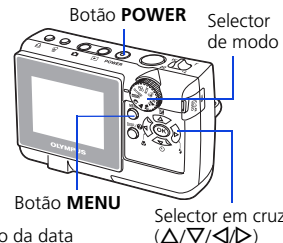

Guia de funcionamento

2 FOTOGRAFAR

a. Zoom

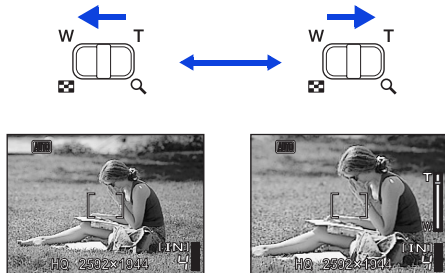


b. Focar

- 1 Utilizando o ecrã, colocar a marca AF sobre o tema fotográfico.



Marca AF

(Premido até meio)



Botão disparador

c. Fotografar

- 1 Premir totalmente o botão disparador para fotografar.

(Totalmente premido)




Botão disparador

- As fotos serão gravadas na memória interna da câmera.
- Se o cartão opcional xD-Picture Card (de agora em diante denominado "cartão") estiver inserido na câmera, as fotos serão armazenadas no cartão.

3 REVER OU APAGAR UMA FOTOGRAFIA

a. Pressione o botão

- A última imagem fotografada será visualizada.

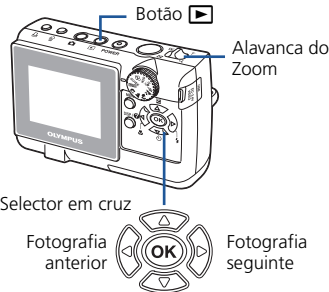

Fotografia anterior

Fotografia seguinte

b. Ver mais de perto




- Pressione a alavanca na direcção **T** para aumentar a imagem até 10 vezes o tamanho original, ou pressione a alavanca na direcção **W** para reduzir o tamanho.
- Pressione **OK** para voltar ao normal.
- Pressione Δ/▽/◀/▶ para percorrer a imagem.



Pressione o botão **OK** para voltar ao modo fotografia.


c. Para apagar uma fotografia

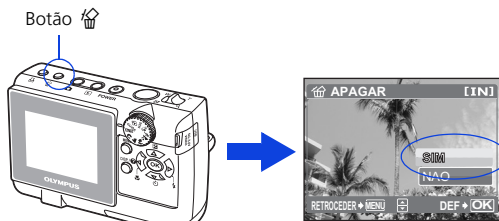

- 1 Visualizar a fotografia que pretende apagar.
- 2 Pressione o botão **OK**.
- 3 Seleccionar [SIM] e pressione **OK**.

- A fotografia é eliminada permanentemente.


DIAGRAMA DA CÂMARA

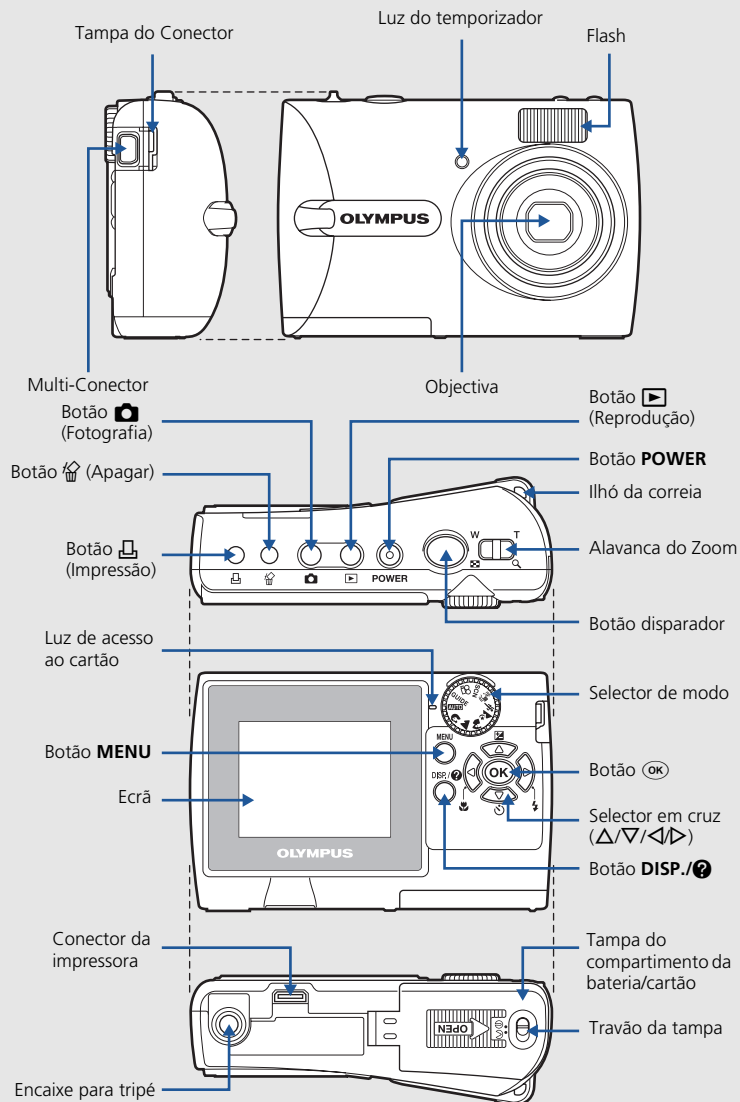

4 TRANSFERIR IMAGENS

a. Instalar o software


- 1 Inserir o CD-ROM OLYMPUS Master.
- 2 **Windows:** Fazer clique no botão "OLYMPUS Master".
Macintosh: Fazer duplo clique no ícone "Installer".
- 3 Seguir simplesmente as instruções no ecrã.

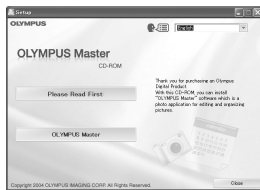

b. Ligar a câmera ao computador


- 1 Ligar a câmera ao computador usando o cabo USB (fornecido).

- O ecrã ligar-se-á automaticamente.

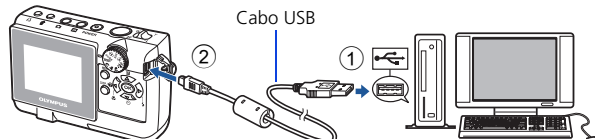


- 2 Seleccionar [PC] no ecrã e pressione **OK**.

- O PC reconhece agora a câmera como um disco amovível.

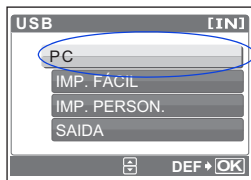

c. Transferir imagens para o computador

- 1 Com a câmera ligada, abrir o OLYMPUS Master.
- 2 Seleccionar as imagens que pretende transferir e fazer clique no botão [Transfer Images] (Transferir imagens).

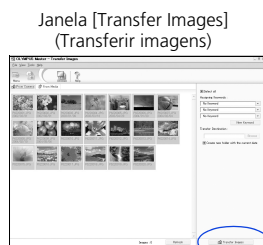

Se a janela [Transfer Images] (Transferir imagens) não surgir automaticamente:

- a. Fazer clique no ícone "Transfer Images" (Transferir imagens) no menu principal do OLYMPUS Master.
- b. Fazer clique no ícone "From Camera" (Da câmera).

Botão [Transfer Images] (Transferir imagens)

Botão [From Camera] (Da câmera)